

How To.

INSTALLATION GUIDE

BEFORE YOU START


Prior to installation, choose a suitable location on flat ground for your Garden Bed, a minimum 118cm x 92cm is required. To ensure the installation of your Stratco Garden Bed proceeds smoothly you should confirm that all the components listed in this installation guide have been supplied.

Carefully read this installation guide to familiarise yourself with all the steps involved, and ensure that you have the correct tools and equipment for the job. All required tools are available for purchase at your local Stratco store.


Use heavy gloves when handling steel sheets and parts. Never attempt to assemble the garden bed in windy conditions.

COMPONENTS


Corner Cap
x4

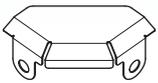


Bolt & Wing Nut
x32

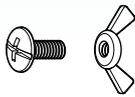

Corner
x4

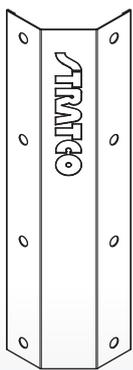


Panel
x2 - 840mm
x2 - 1100mm

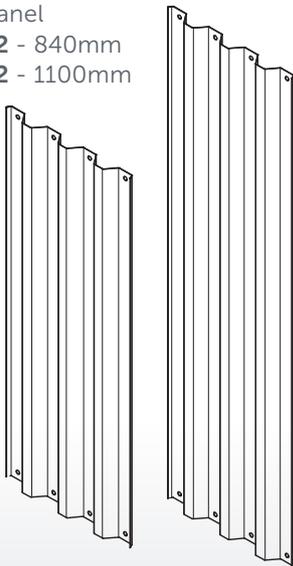


TOOLS

Pliers

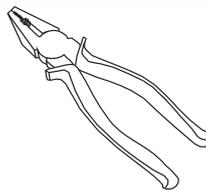

Phillips-head Screwdriver

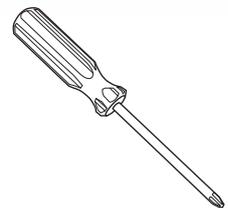

SAFETY GEAR

Gloves



Safety Glasses




RAISED GARDEN BED - SINGLE HEIGHT

RAISED GARDEN BED - SINGLE HEIGHT INSTALLATION GUIDE


ASSEMBLY - STEP 1

Assemble the two short sides of the Raised Garden Bed as illustrated below. Firstly, assemble the short Panel, Corner and Corner Cap together. Loosely fasten the Bolts and Wing Nuts to ensure all parts fit together easily. Once the Panel is assembled, tighten all Bolts. Complete these steps for both ends of the Panel.

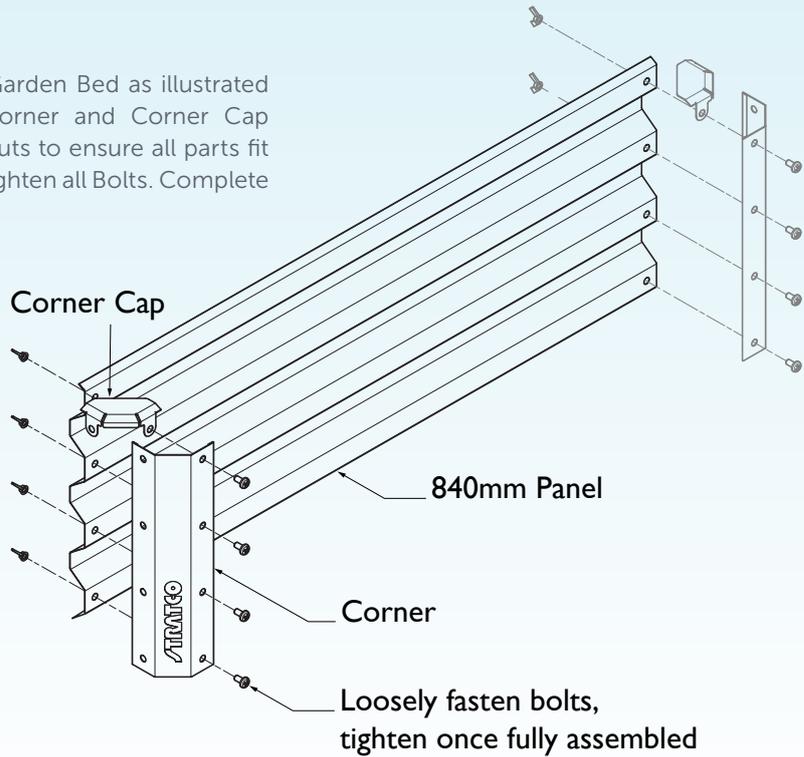

ASSEMBLY - STEP 2

Fasten the two long Panels to the Panels assembled in step 1.

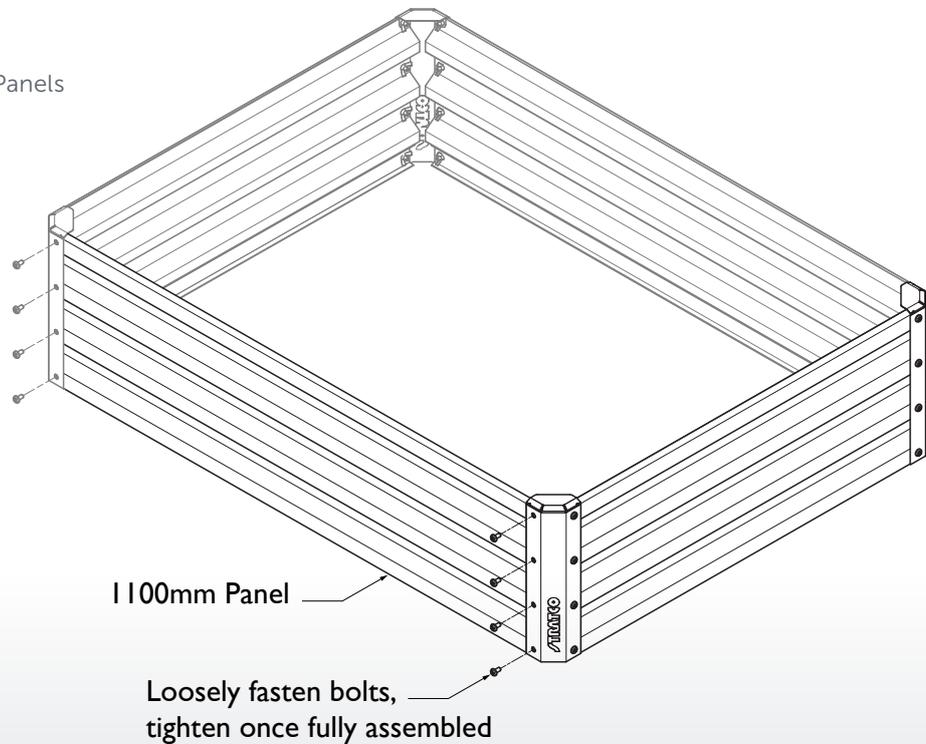

« SCAN THIS QR CODE TO FIND A STRATCO NEAR YOU

1300 155 155
stratco.com.au

All brands and logos/images accompanied by © or ™ are trade marks of Stratco (Australia) Pty Limited. © Copyright January 2020

How To.

